

## 7005 Deadbolt Cabinet Door Lock

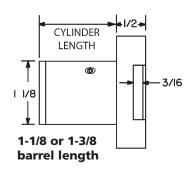

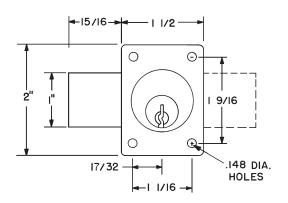




## Included Acc<u>essories (1-1/8 barrel</u> length locks):


- 2 nickel plated keys
- 2 10-350 plastic spacers
- 1 10-054 1/4" plastic bar strike
- 1 10-055 1/2" plastic bar strike
- 4 lock mounting screws

## **Included Accessories (1-3/8 barrel** length locks):

- 2 nickel plated keys
- 1 10-054 1/4" plastic bar strike
- 4 lock mounting screws

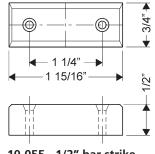



10-055 - 1/2" bar strike

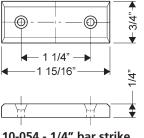


10-054 - 1/4" bar strike

## **Spacer options** Note: use of spacers and strikes depends on application and material thickness.







**Typical Installation** Flush Lipped Overlay Overlav\* **Full Overlay** \*Overlay installation is not recommended for particleboard.

